

SPEEDSENSOR INSTALLATION

INSTRUCTIONS FOR ALL LOWER ADAPTORS

1. REMOVE SCREW AND CLAMP THAT HOLDS SPEEDOMETER CABLE IN TRANSMISSION HOUSING.
2. THEN PULL THE SPEEDOMETER CABLE OUT OF TRANSMISSION HOUSING.
3. REMOVE O-RING, LOCK RING, AND DRIVE GEAR FROM SPEEDOMETER CABLE AND PUT ALL THREE OF THESE ITEMS ONTO THE END OF THE 12" CABLE ADAPTER SUPPLIED WITH KIT. (SEE FIG. 1)
4. INSERT EXTENSION KEY IN SPEEDSENSOR, SLIDE LARGE NUT OVER THE ADAPTER SLEEVE AND TIGHTEN ONTO SPEEDSENSOR. NOW SLIDE EXISTING SPEEDOMETER CABLE ONTO THE ADAPTER SLEEVE. THEN TIGHTEN THE SET SCREW. (SEE FIG. 1)
5. NEXT ATTACH THE 12" ADAPTER CABLE TO THE SPEEDSENSOR AS SHOWN IN FIG. 1.
6. NOW SLIDE THE DRIVE GEAR ON THE 12" ADAPTER CABLE INTO THE TRANSMISSION HOUSING.
7. REATTACH THE CLAMP AND SCREW TO TRANSMISSION HOUSING.

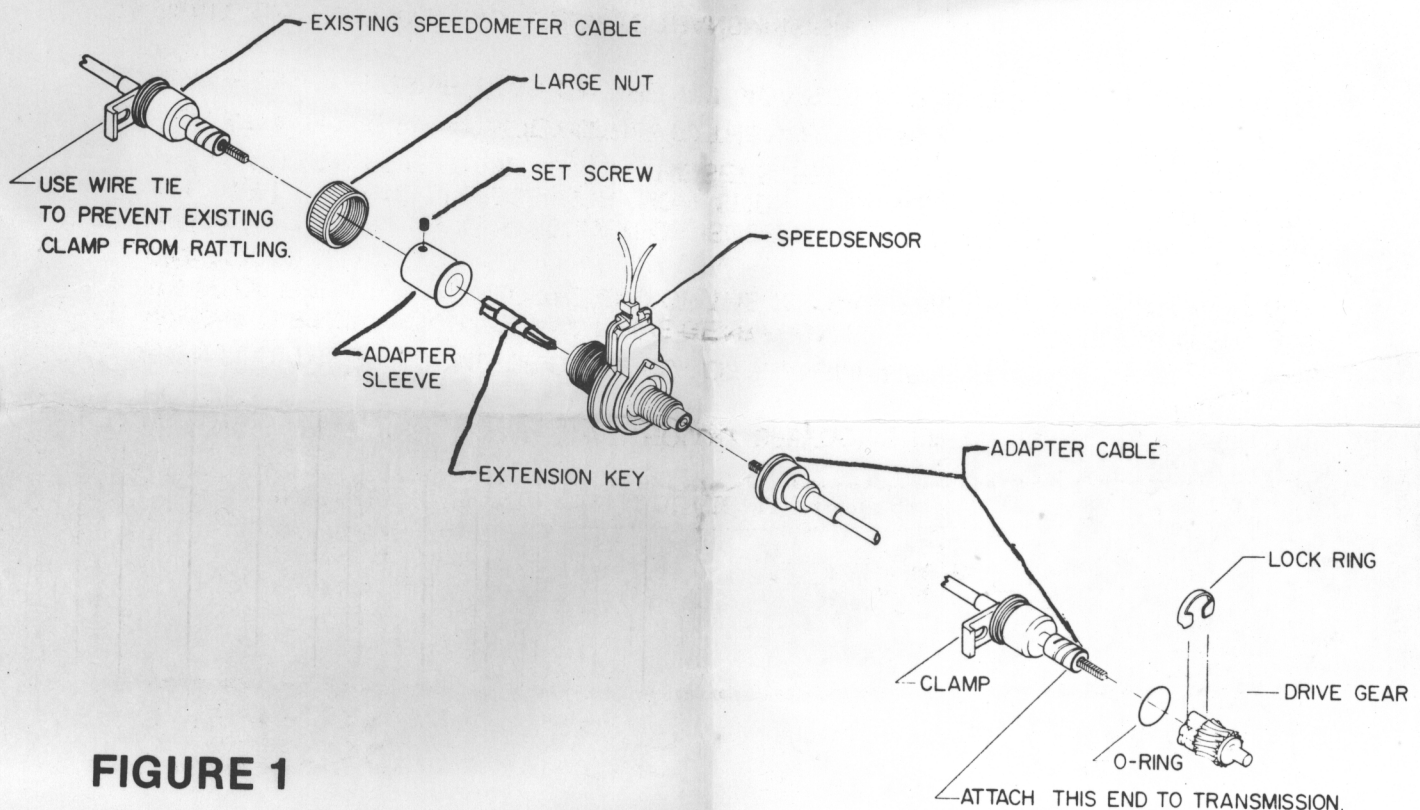


FIGURE 1